OLIMPIA SPLENDID

HOME OF COMFORT

Technical Service Letter

MAESTRO SMART

MAESTRO SMART 9 HP (Model # 02216)

B1018 – Maestro Wi-Fi kit installation

For Technical Support contact:

Tech Support

OLIMPIA SPLENDID HOME OF COMFORT

TechSupport@olimpiasplendidusa.com

(800) 408-5196 (ext. 103)

Removing the front cover

To remove the front cover from the unit start by removing the back shoulder section by prying up to get access to the screws underneath. Remove the 2 screws one left and one right to remove the front shoulder piece.
Remove the bottom pull out tray and bar below supply air to get access to the final 6 screws to remove the cover.

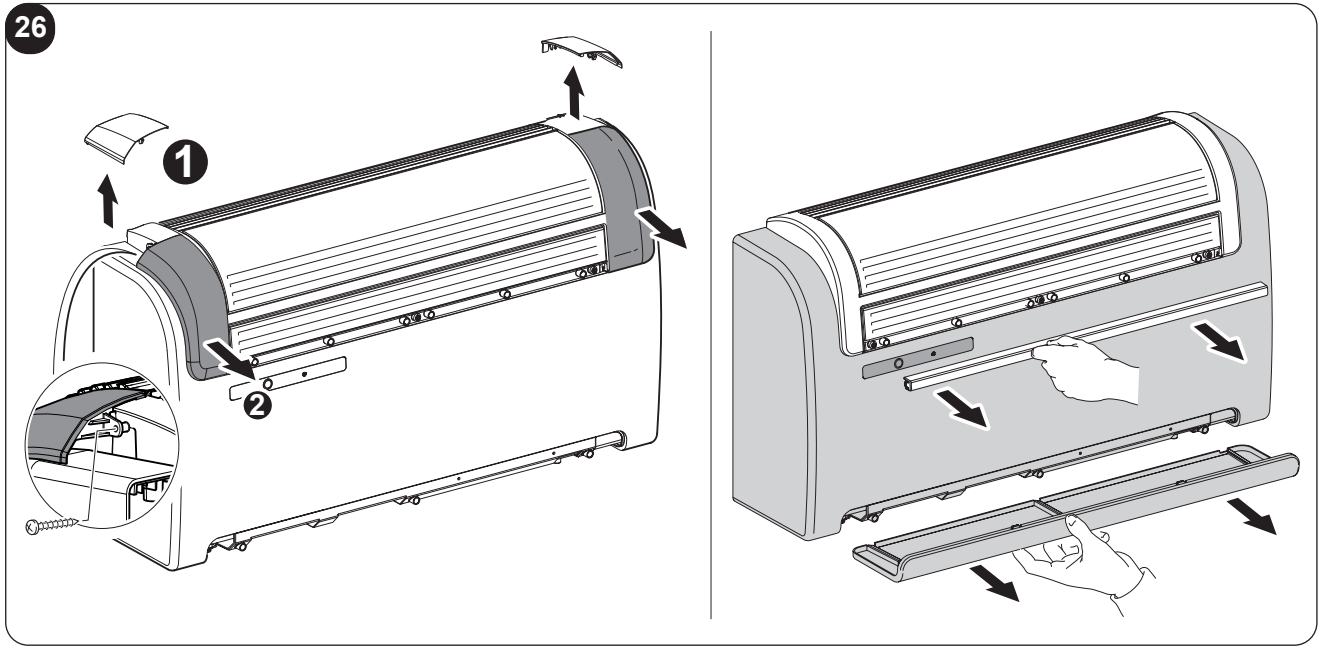

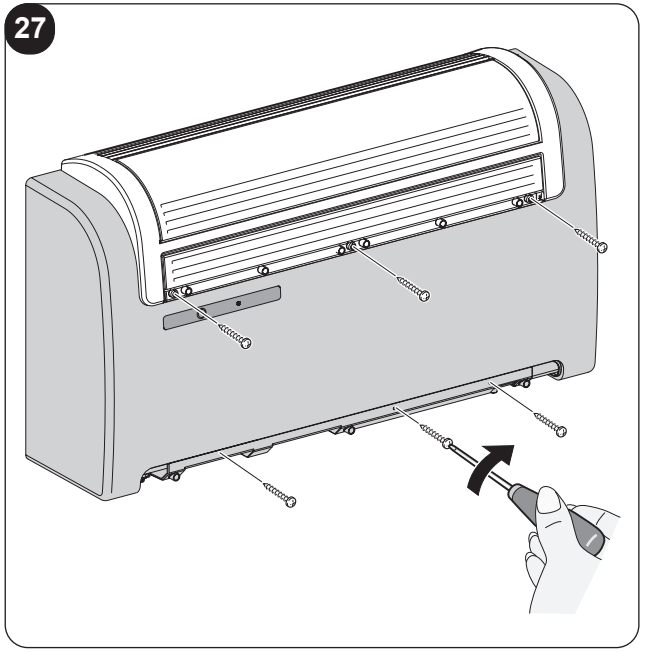

On the back side of unit. Remove access panel in upper right corner.

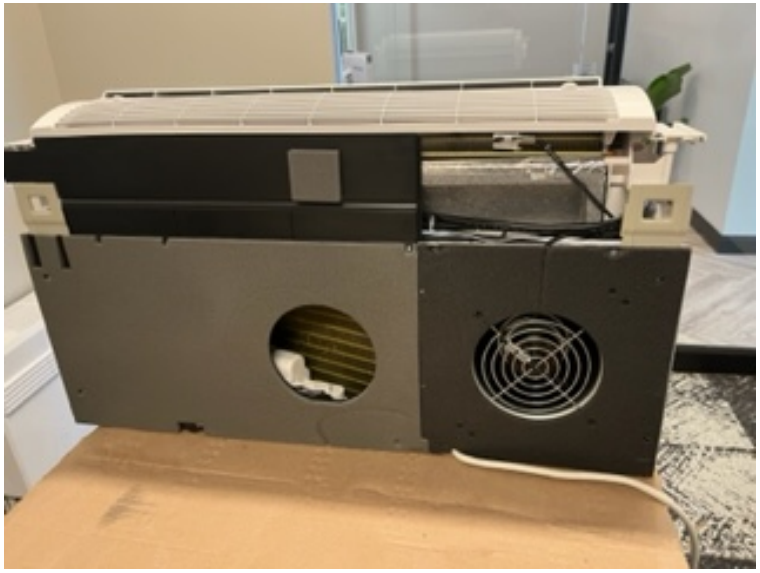

Here you will find accessory board slot

Install B1018 Maestro Wi-Fi accessory board with two provided screws.

On the front unit, remove electrical compartment cover on the lefthand side. To access control board.

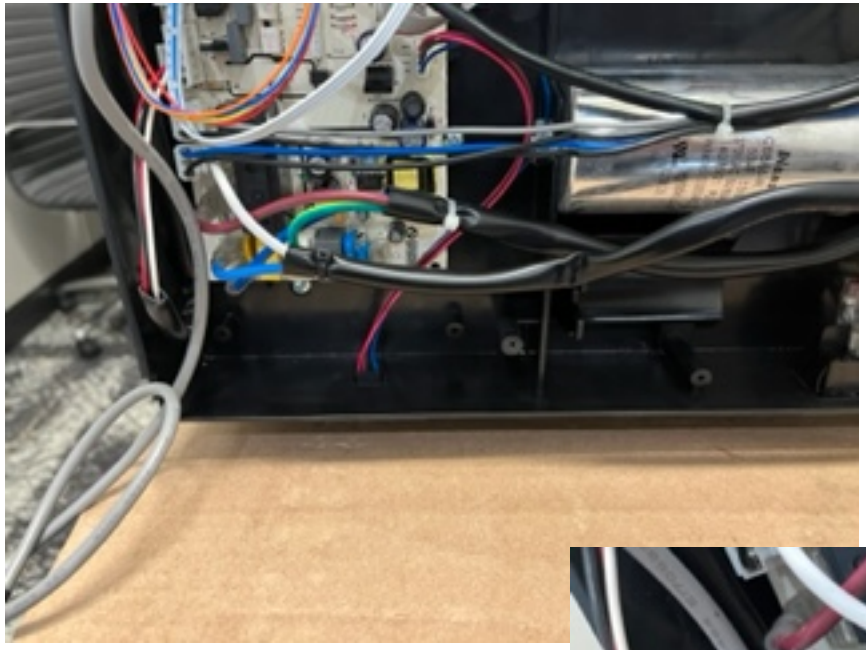

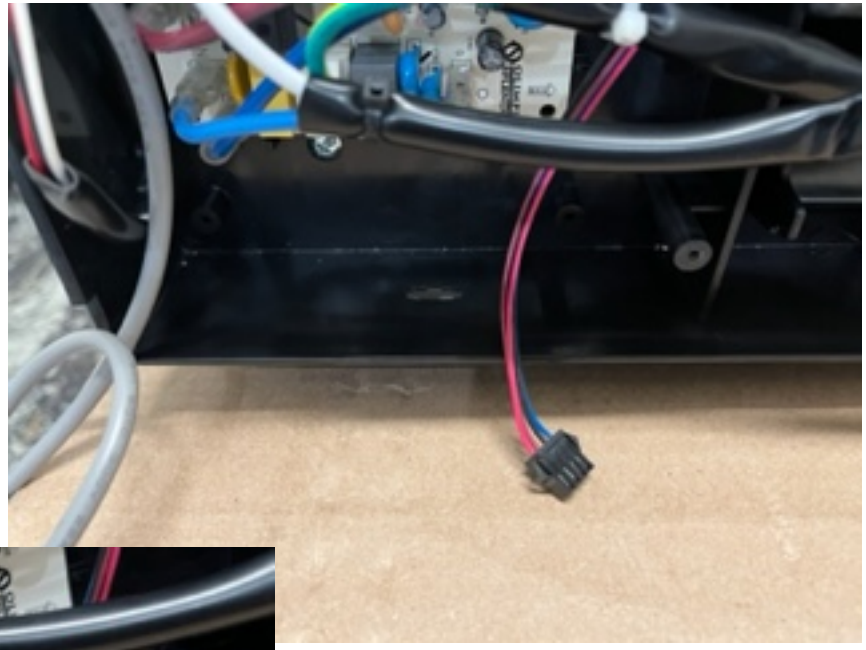

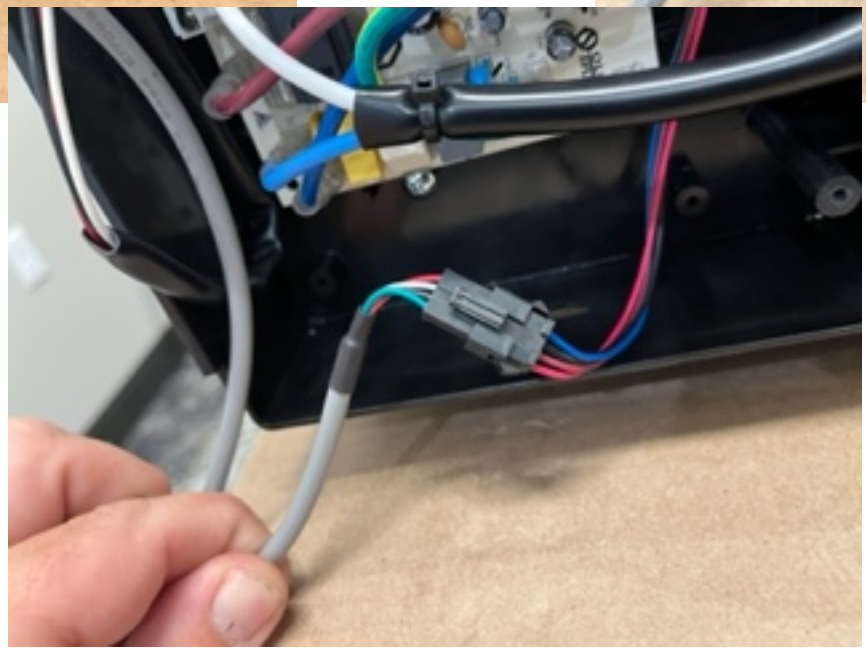

Remove comm. molex plug coming from the control board to the slot at bottom of electrical compartment.

Connect the grey comm. cable that is supplied with B1018 wi-fi board.

MAESTRO SMART

OLIMPIA SPLENDID
HOME OF COMFORT

Route the cable up and around back of unit to accessory board.

Connect grey comm. cable to X3 slot labelled on/off.

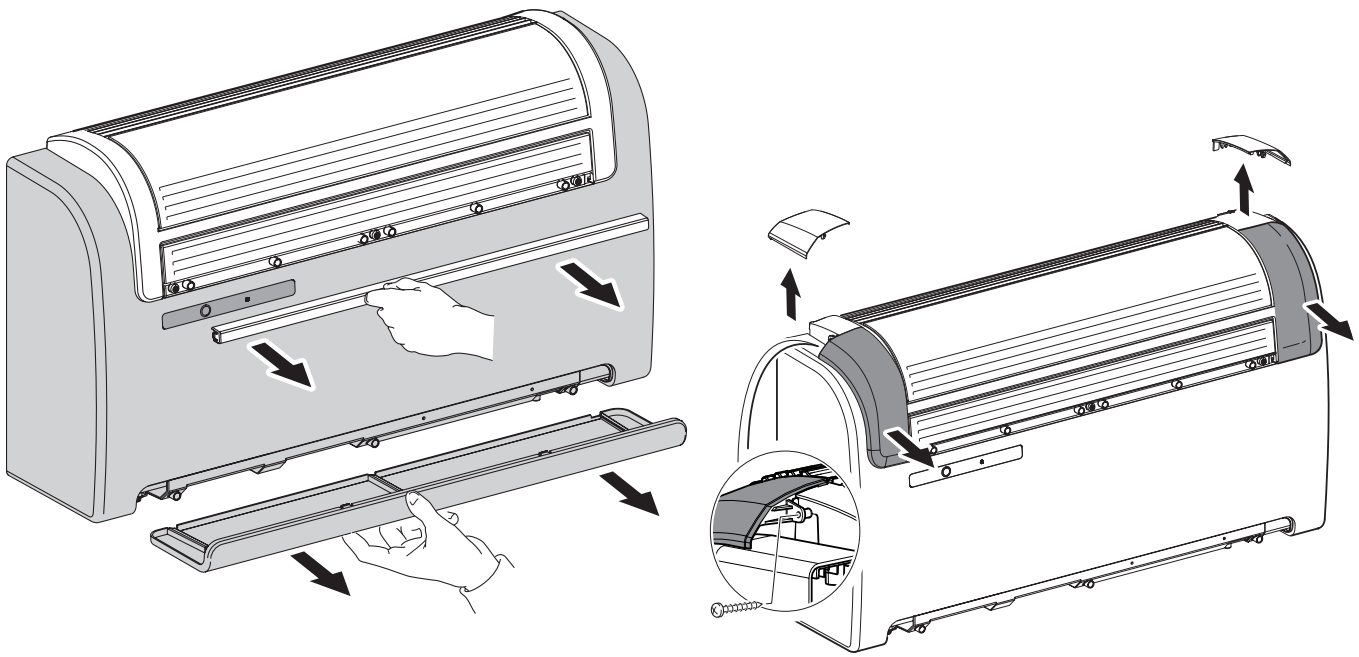

Reassemble unit, download the Maestro App from the app store for iPhone or Android devices. And follow set up instructions.

MAESTRO SMART

OLIMPIA SPLENDID
HOME OF COMFORT